
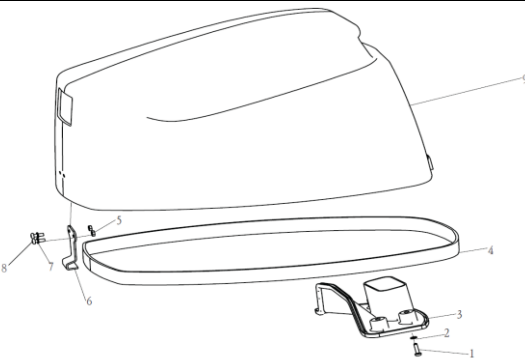


КАТАЛОГ ЗАПЧАСТЕЙ


SEA-PRO F 9.8

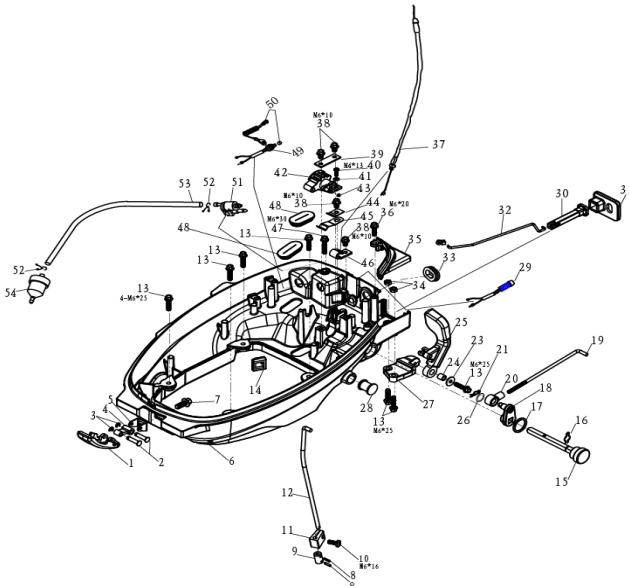

Sea-Pro F 9.8


	№	Артикул запчасти и название	Кол-во
Колпак 	1	GB/T845-85 Винт с шайбой F9,8 (1-1/2)	4
	2		
	3	F9.8-04000003 Воздухозаборник F9,8 (1-3)	1
	4	F9.8-04000002 Уплотнитель капота 1290мм F9.8A (1-4)	1
	5	GB/T6182-2000 Гайка F9.8A (2-34)	2
	6	F9.8-04000004 Скоба капота F9,8 (1-6)	1
	7	GB/T97.1-85 Шайба 5 F9.8A (2-41)	2
	8	GB/818-2000 Болт с шайбой F9,8 (1-8)	2
	9	F9.8-04000001 Капот в сборе F9.8A (1-9)	1
Поддон 	1	T2.6-03000101 Защелка капота F9.8A (2-1)	1
	2	F9.8-05000033 Стержень Ф5*26.5 F9.8A (2-2)	2
	3	GB/T896-86 Кольцо стопорное 5 F9.8A (2-3)	2
	4	F9.8-05000032 Замок защелки F9.8A (2-4)	1
	5	F9.8-05000035 Скоба защелки M6 F9.8A (2-5)	1
	6	F9.8-05000031 Поддон двигателя F9.8A (2-6)	1
	7	GB/T5782 Болт M6X12 F9.8A (2-7)	1
	8	GB/T6170-2000 Гайка M6 F9.8A (2-8)	1
	9	ALF15-09000030 Гайка столбчатая F9.8A (2-9)	1
	10	GB/T818-2000 Болт M6X16 F9.8A (2-10)	1
	11	F9.8-05000037 Зажим соединительный тяги п/п F9.8A (2-11)	1
	12	F9.8-05000008 Тяга п/п F9.8A (2-12)	1
	13	GB/T5783-2000 Болт M6X20 F9.8A (2-13)	2
	14	F9.8-05000039 Заглушка 22*23 F9.8A (2-14)	1
	15	F9.8-05030000 Вал тяги п/п F9.8A (2-15)	1
	16	GB/T891986 Кольцо стопорное F9.8A (2-16)	1
	17	F9.8-05000009 Кольцо уплотнительное F9.8A (2-17)	1
	18	F9.8-05000028 Рычаг вала п/п F9.8A (2-18)	1
	19	F9.8-05000007 Тяга ручки п/п F9.8A (2-19)	1
	20	F9.8-05000029 Наконечник тяги п/п Ф30*Ф19 F9.8A (2-20)	1
	21	F9.8-05000026 Шпилька 1.5*28 F9.8A (2-21)	1
	22	GB/T5783-2000 Болт M6X25 F9.8A (2-22)	1
	23	GB/T96.1-85 Шайба 6 F9.8A (2-23)	1
	24	F9.8-05000021 Втулка ручки п/п F9.8A (2-24)	1
	25	F9.8-05000023 Ручка п/п F9.8A (2-25)	1
	26	GB/T96.1-85 Шайба 8 F9.8A (2-26)	1
	27	F9.8-05000022 Площадка крепления ручки п/п F9.8A (2-27)	1
	28	F9.8-05000001 Заглушка Ф15*25 F9.8A (2-28)	1
	29	F9.8-01080700 Лампа сигнальная давления масла F9.8A (2-29)	1
	30	F9.8-05000018 Корпус ручки воз. заслонки F9.8A (2-30)	1
	31	F9.8-05000019 Основание ручки воз. заслонки 10*10*80 F9.8A (2-31)	1
	32	F9.8-05000016 Тяга ручки воз. заслонки F9.8A (2-32)	1
	33	F9.8-05000003 Заглушка 21*31 F9.8A (2-33)	1
	34	GB/T6182-2000 Гайка 6 F9.8A (2-34)	2
	35	F9.8-05000020 Крышка кронштейна F9.8A (2-35)	1
	36	GB/T16674-2004 Болт M6X20 F9.8A (2-36)	1
	37	F9.8-05020000 Трос блокировки стартера F9.8A (2-37)	1
	38	GB/T16674-2004 Болт M6X10 F9.8A (2-38)	2
	39	F9.8-05000014 Пластина 44*15*2 F9.8A (2-39)	1
	40	GB/T818-2000 Болт M4X13 F9.8A (2-40)	1
	41	GB/T97.1-85 Шайба F9.8A (2-41)	1
	42	F9.8-05000013 Опора F9.8A (2-42)	1
	43	GB/T896-86 Кольцо стопорное 3,5 F9.8A (2-43)	1
	44	F9.8-05000012 Пластина F9.8A (2-44)	1
	45	F9.8-05000011 Скоба F9.8A (2-45)	2
	46	F9.8-05000010 Держатель F9.8A (2-46)	1
	47	GB/T16674-2004 Болт M6X30 F9.8A (2-47)	6
	48	F9.8-05000004 Заглушка 26*47 F9.8A (2-48)	2
	49	ALT4-08000008 Кнопка аварийной остановки двигателя F9.8A (2-49)	1
	50	ALT8-00000200 Трос страховочный F9.8A (2-50)	1
	51	F15-09010000 Коннектор топливный F9.8A (2-51)	1
	52	ALF15-09000015 Хомут F9.8A (2-52)	2
	53	F9.8-01060116 Шланг F9.8A (2-53)	1
	54	T4-03000014 Фильтр топливный F9.8A (2-54)	1





Двигатель

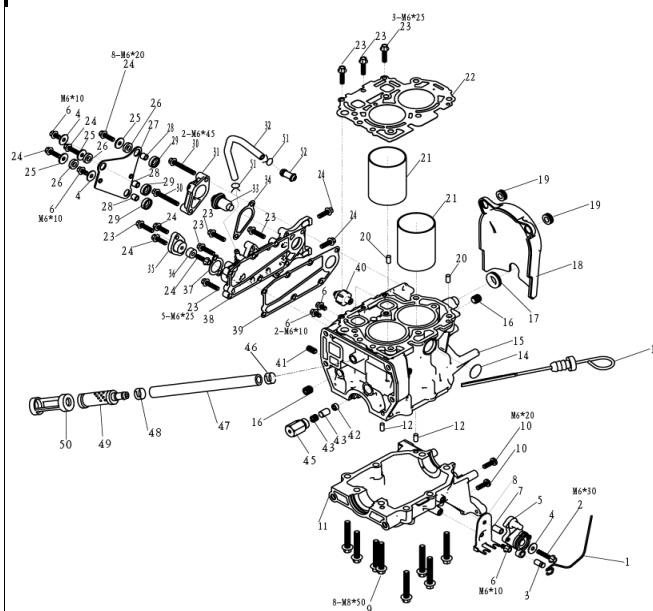


	F9.8-01000000 Двигатель в сборе F9.8A (3-0)	1
1	F9.8-01000013 Тяга соединительная F9.8A (3-1)	1
2	GB/T16674-2004 Болт М6Х30 F9.8A (3-2)	1
3	F9.8-03000301 Вставка F9.8A (3-3)	1
4	GB/T96.1-85 Шайба 6 F9.8A (3-4)	4
5	F9.8-03000300 Рычаг управления дроссельной заслонкой F9.8A (3-5)	1
6	GB/T16674-2004 Болт М6Х10 F9.8A (3-6)	5
7	F9.8-01070011 Втулка F9.8A (3-7)	1
8	F9.8-01000006 Скоба управления F9.8A (3-8)	1
9	GB/T5789-2000 Болт М8Х50 F9.8A (3-9)	8
10	GB/T16674-2004 Болт М6Х35 F9.8A (3-10)	2
11	F9.8-01010101 Картер двигателя F9.8A (3-11)	1
12	GB/T119.2 Втулка Ф6Х12 F9.8A (3-12)	2
13	F9.8-01010600 Масляный шуп F9.8A (3-13)	1
14	F9.8-01000017 Кольцо F9.8A (3-14)	1
15	F9.8-01010100 Корпус двигателя F9.8A (3-15)	1
16	F9.8-01010010 Блокиратор R1/4"-19 F9.8A (3-16)	2
17	F9.8-01000014 Шайба F9.8A (3-17)	1
18	F9.8-01000012 Крышка F9.8A (3-18)	1
19	F9.8-01000015 Шайба F9.8A (3-19)	2
20	GB/T119.2 Втулка Ф6Х12 F9.8A (3-20)	2
21	F9.8-01010102 Гильза цилиндра Ф52*Ф63*76 F9.8A (3-21)	2
22	F9.8-01000008 Прокладка ГБЦ F9.8A (3-22)	1
23	GB/T16674-2004 Болт М6Х25 F9.8A (3-23)	8
24	GB/T16674-2004 Болт с шайбой М6Х25 F9.8A (3-24)	8
25	GB/T96.1-85 Шайба 6 F9.8A (3-25)	20
26	F9.8-01080006 Кольцо демпфирующее F9.8A (3-26)	3
27	F9.8-01080001 Крышка F9.8A (3-27)	1
28	F9.8-01080005 Вкладыш вибрационный F9.8A (3-28)	3
29	F9.8-01080004 Втулка F9.8A (3-29)	3
30	GB/T16674-2004 Болт М6Х40 F9.8A (3-30)	2
31	F9.8-01010008 Крышка корпуса термостата F9.8A (3-31)	1
32	F9.8-05000006 Шланг F9.8A (3-32)	1
33	ALF4-05000010 Термостат F9.8A (3-33)	1
34	F9.8-01010009 Прокладка крышки термостата F9.8A (3-34)	1
35	F9.8-01010007 Крышка анода F9.8A (3-35)	1
36	CM5338602182АОА Анод Ф20*7 F9.8A (3-36)	1
37	F9.8-01010006 Прокладка крышки анода F9.8A (3-37)	1
38	F9.8-01010003 Крышка выпуска F9.8A (3-38)	1
39	F9.8-01010004 Прокладка крышки выпуска F9.8A (3-39)	1
40	F9.8-01010300 Датчик давления масла F9.8A (3-40)	1
41	F9.8-01010011 Блокиратор F9.8A (3-41)	1
42	F9.8-01010404 Клапан F9.8A (3-42)	1
43	F9.8-01010403 Пружина F9.8A (3-43)	1
44	F9.8-01010402 Сердечник клапана F9.8A (3-44)	1
45	F9.8-01010401 Корпус клапана перепускного F9.8A (3-45)	1
46	F15-01010012 Хомут F9.8A (3-46)	1
47	F15-11040002 Патрубок F9.8A (3-47)	2
48	F9.8-01000011 Хомут F9.8A (3-48)	1
49	ALF15-11040100 Втулка сетчатая фильтра F9.8A (3-49)	1
50	ALF15-11040105 Фильтр-сетка F9.8A (3-50)	1
51	ALF15-09000015 Хомут F9.8A (3-51)	2
52	ALF15-09000009 Сопло пластиковое F9.8A (3-52)	1

Коленвал

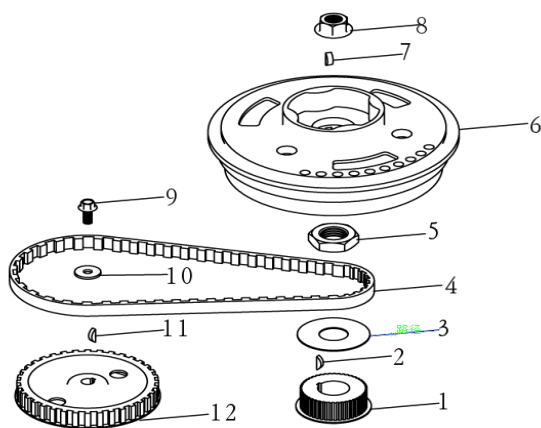[illegible]

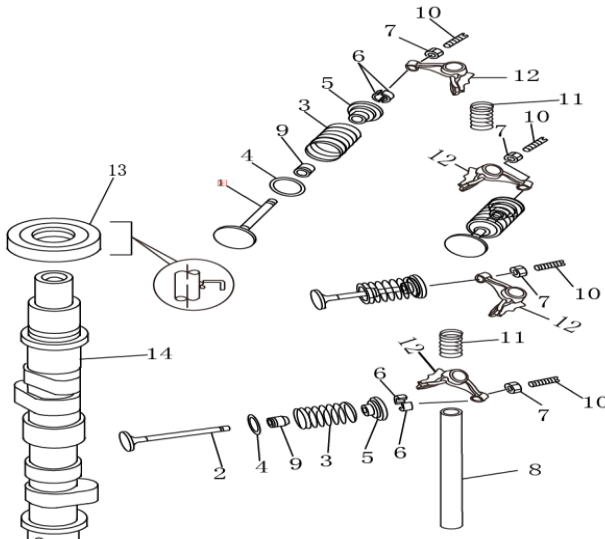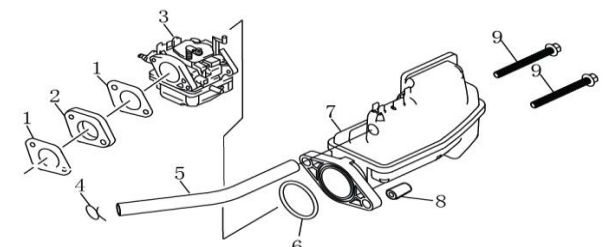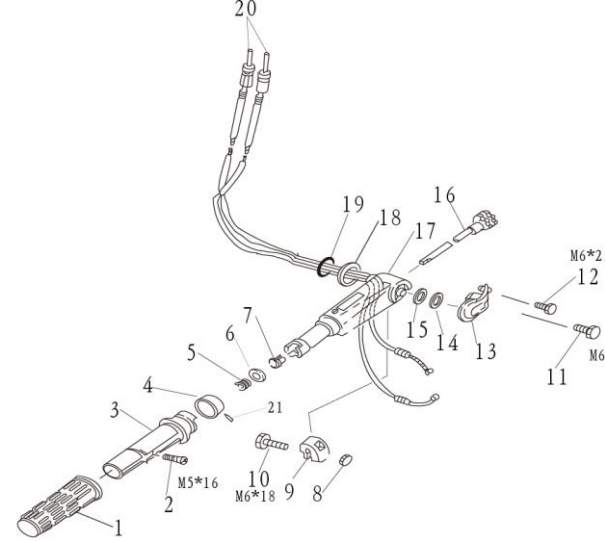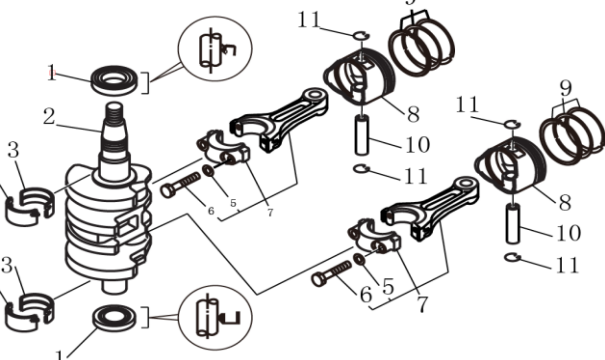
Распредвал			
	1	F9.8-01020001 Впускной клапан F9.8A (4-1)	2
	2	F9.8-01020003 Выпускной клапан F9.8A (4-2)	2
	3	F9.8-01020006 Пружина клапана $\Phi 20 \times 36 \times 2.3$ F9.8A (4-3)	4
	4	ALF4-05040006 Седло пружины клапана F9.8A (4-4)	4
	5	F9.8-01020004 Тарелка клапана F9.8A (4-5)	4
	6	F9.8-01020005 Сухарь F9.8A (4-6)	8
	7	F9.8-01020302 Гайка M6X0.75 F9.8A (4-7)	4
	8	F9.8-01020303 Вал рокера $\Phi 9 \times \Phi 13 \times 151$ F9.8A (4-8)	1
	9	F15-11030003 Сальник клапана F9.8A (4-9)	4
	10	F15-11030303 Винт F9.8A (4-10)	4
	11	F9.8-01020009 Пружина рокера $\Phi 16.8 \times 25$ F9.8A (4-11)	2
	12	F9.8-01020301 Рокер F9.8A (4-12)	4
	13	F9.8-01020500 Сальник распредвала 18X35X8-R F9.8A (4-13)	1
	14	F9.8-01020400 Распредвал F9.8A (4-14)	1
	15	T15-05020004 Шайба 14*18*1.2 F9.8A (4-15)	2
	16		
Карбюратор			
	1	F9.8-01040004 Прокладка карбюратора F9.8A (6-1)	2
	2	F15-11000018 Прокладка карбюратора толстая F9.8A (6-2)	1
	3	F9.8-01040200 Карбюратор F9.8A (6-3)	1
	4	ALF15-09000015 Хомут 9,5 F9.8A (6-4)	2
	5	F9.8-01040006 Шланг $\Phi 7 \times \Phi 12 \times 280$ F9.8A (6-5)	1
	6	GB3452.1-92 Кольцо глушителя F9.8A (6-6)	1
	7	F9.8-01040100 Глушитель F9.8A (6-7)	1
	8	F9.8-01040104 Втулка глушителя 6.3*8.5*9.5 F9.8A (6-8)	2
	9	GB/T16674-2004 Болт M6X95 F9.8A (6-9)	2
Румпель			
		F9.8-03000100 Румпель в сборе F9.8A (7-0)	1
	1	ALT15-02010203 Ручка румпеля F9.8A (7-1)	1
	2	GB/T820-85 Винт M5x16 F9.8A (7-2)	1
	3	ALT15-02010201 Втулка ручки румпеля F9.8A (7-3)	1
	4	ALT8-04000005 Индикатор F9.8A (7-4)	1
	5	ALF15-05020007 Пружина F9.8A (7-5)	1
	6	GB/T848-85 Шайба 10 F9.8A (7-6)	1
	7	ALF15-05020006 Пружина F9.8A (7-7)	1
	8	GB/T943 Гайка M6 F9.8A (7-8)	1
	9	ALT8-03000300 Зажим F9.8A (7-9)	1
	10	GB/T5783-2000 Болт M6X18 F9.8A (7-10)	1
	11	GB/T16674-2004 Болт M6X45 F9.8A (7-11)	1
	12	GB/T16674-2004 Болт M6X25 F9.8A (7-12)	1
	13	ALT8-03020006 Крышка корпуса румпеля F9.8A (7-13)	1
	14	ALT8-03020004 Шайба румпеля F9.8A (7-14)	1
	15	ALT8-03020007 Шайба румпеля 25.8x12.3x0.5 F9.8A (7-15)	1
	16	ALT8-03020100 Вал газа F9.8A (7-16)	1
	17	ALT8-03020001 Корпус румпеля F9.8A (7-17)	1
	18	ALT8-03020002 Втулка румпеля F9.8A (7-18)	1
	19	ALT8-03020003 Кольцо уплотнительное 24x3 F9.8A (7-19)	1
	20	F9.8-03000200 Трос газа F9.8A (7-20)	2
	21	GB/T827-86 Штифт 2X5 F9.8A (7-21)	1
Коленвал и поршневая группа			
	1	F9.8-01000004 Сальник коленвала верхний F9.8A (10-1)	2
	2	F9.8-01030100 Коленвал F9.8A (10-2)	1
	3	F9.8-01000005 Вкладыш шатуна F9.8A (10-3)	2
	4	F9.8-01000007 Вкладыш шатуна F9.8A (10-4)	2
	5	Шайба F9.8A (10-5)	4
	6	Болт F9.8A (10-6)	4
	7	F9.8-01030300 Шатун в сборе F9.8A (10-7)	2
	8	F9.8-01030201 Поршень F9.8A (10-8)	2
	9	F9.8-01030202 Кольцо поршневое F9.8A (10-9)	2
		F9.8-01030203 Кольцо поршневое F9.8A (10-9)	2
		F9.8-01030204 Кольцо поршневое F9.8A (10-9)	2
	10	F9.8-01030002 Палец поршневой $\Phi 10 \times \Phi 14 \times 44$ F9.8A (10-10)	2
	11	F9.8-01030001 Стопор пальца $\Phi 1.0 \times \Phi 16$ F9.8A (10-11)	4

Редуктор

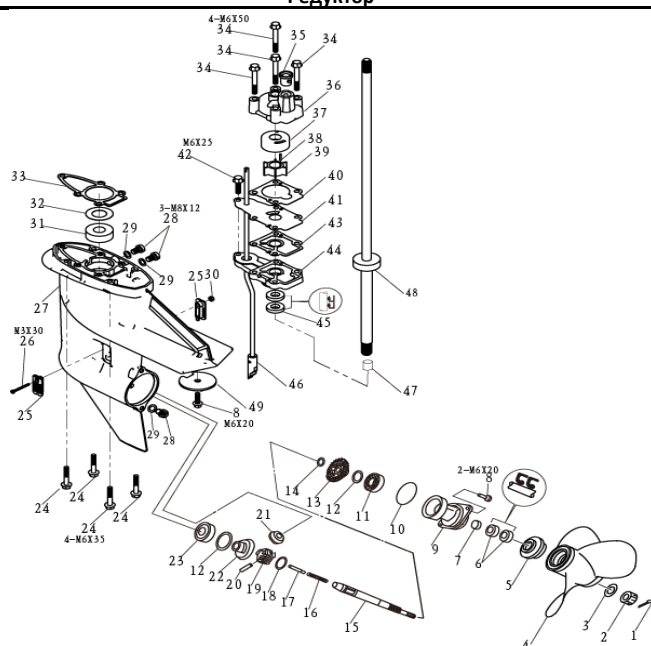


F9.8-07000000 Редуктор в сборе F9.8A (12-0)	1
1 GB/T91-2000 Шплинт гайки винта 2.5X20 F9.8A (12-1)	1
2 GB/T9458-88 Гайка винта M10X1.25 F9.8A (12-2)	1
3 GB/T96.1-85 Шайба 10*28*2 F9.8A (12-3)	1
4 F9.8-07110000 Винт гребной F9.8A (12-4)	1
5 F9.8-07000015 Упорная шайба винта F9.8A (12-5)	1
6 F9.8-07090004 Сальник вала винта 15x28x10 F9.8A (12-6)	1
7 F9.8-07090003 Подшипник 15*17*16.5 F9.8A (12-7)	1
8 GB/T5789-2000 Болт M6X20 F9.8A (12-8)	2
9 F9.8-07090001 Стакан редуктора F9.8A (12-9)	1
10 F9.8-07090002 Кольцо стакана редуктора 50x3.2 F9.8A (12-10)	1
11 F9.8-07030000 Подшипник шестерни з/х Ф20*Ф37*12 F9.8A (12-11)	1
12 F9.8-07090006 Шайба F9.8A (12-12)	1
13 F9.8-07090005 Шестерня заднего хода F9.8A (12-13)	1
14 F9.8-07080006 Прокладка F9.8A (12-14)	1
15 F9.8-07080001 Вал винта F9.8A (12-15)	1
16 F9.8-07080002 Пружина вала включения сцепления Ф6.5*57 δ=1.0 F9.8A (12-16)	1
17 F9.8-07080004 Вал включения сцепления F9.8A (12-17)	1
18 F9.8-07080007 Пружина муфты сцепления Ф25*1 F9.8A (12-18)	1
19 F9.8-07080003 Муфта сцепления Ф29*20 F9.8A (12-19)	1
20 GB/T119.2-2000 Фиксатор муфты сцепления Ф4.5*23.5 F9.8A (12-20)	1
21 F9.8-07050006 Шестерня ведущая F9.8A (12-21)	1
22 F9.8-07040000 Шестерня переднего хода F9.8A (12-22)	1
23 F9.8-07020000 Подшипник шестерни п/х 6204 F9.8A (12-23)	1
24 GB/T5789-2000 Болт M6*35 F9.8A (12-24)	2
25 F9.8-07000012 Решетка водозабора F9.8A (12-25)	2
26 GB/T823-88 Болт M4*30 F9.8A (12-26)	1
27 F9.8-07000016 Корпус редуктора F9.8A (12-27)	1
28 Болт M8*12 F9.8A (12-28)	2
29 Шайба M8X8 F9.8A (12-29)	2
30 GB/T6182-86 Гайка M4 F9.8A (12-30)	1
31 NSK1520 Подшипник торсионного вала F9.8A (12-31)	1
32 F9.8-07050005 Шайба-прокладка F9.8A (12-32)	1
33 F9.8-07000009 Прокладка основания помпы F9.8A (12-33)	1
34 GB/T5789-2000 Болт M6X50 F9.8A (12-34)	4
35 F9.8-07000001 Втулка трубки охлаждения F9.8A (12-35)	1
36 F9.8-07000002 Корпус помпы Ф37.5*18.5 F9.8A (12-36)	1
37 F9.8-07000003 Стакан помпы Ф36*17.8*Ф13 F9.8A (12-37)	1
38 F9.8-07000005 Штырь направляющий корпуса помпы F9.8A (12-38)	1
39 F9.8-07100000 Крыльчатка помпы F9.8A (12-39)	1
40 F9.8-07000004 Прокладка корпуса помпы F9.8A (12-40)	1
41 F9.8-07000006 Зеркало помпы F9.8A (12-41)	1
42 GB/T5789-2000 Болт M6X25 F9.8A (12-42)	1
43 F9.8-07000013 Прокладка помпы F9.8A (12-43)	1
44 F9.8-07060001 Основание помпы F9.8A (12-44)	1
45 F9.8-07060002 Сальник вертикального вала F9.8A (12-45)	2
46 F9.8-07070000 Шток п/п F9.8A (12-46)	1
47 Втулка вертикального вала 5*4,5 F9.8A (12-47)	1
48 F9.8-07060000 Вертикальный вал F9.8A (12-48)	1
49 CM3V1602170A Анод F9.8A (12-49)	1
50 F9.8-07000007 Резиновая прокладка F9.8A (12-50)	1
51 F9.8-07000008 Вкладыш прокладки F9.8A (12-51)	1

Электрика

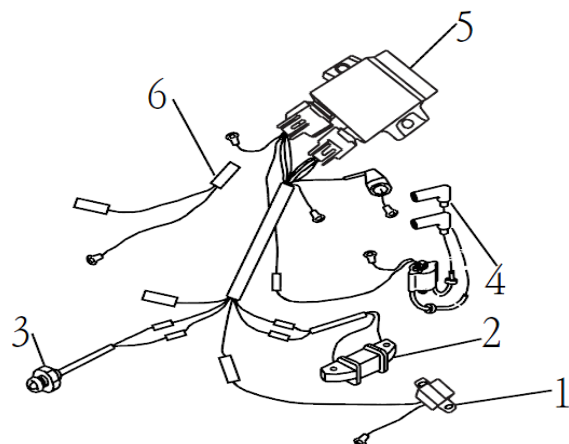


F9.8-01080000 F9.8A (14-0)	1
1 F9.8-01080100 Катушка импульсная F9.8A (14-1)	1
2 F9.8-01080200 Катушка зажигания генератора F9.8A (14-2)	1
3 F9.8-01080700 Лампа сигнальная давления масла F9.8A (14-3)	1
4 F9.8-01080500 Катушка высоковольтная F9.8A (14-4)	1
5 F9.8-01080300 Коммутатор F9.8A (14-5)	1
6 F9.8-01080401 Провод заземления F9.8A (14-6)	1

Струбцина


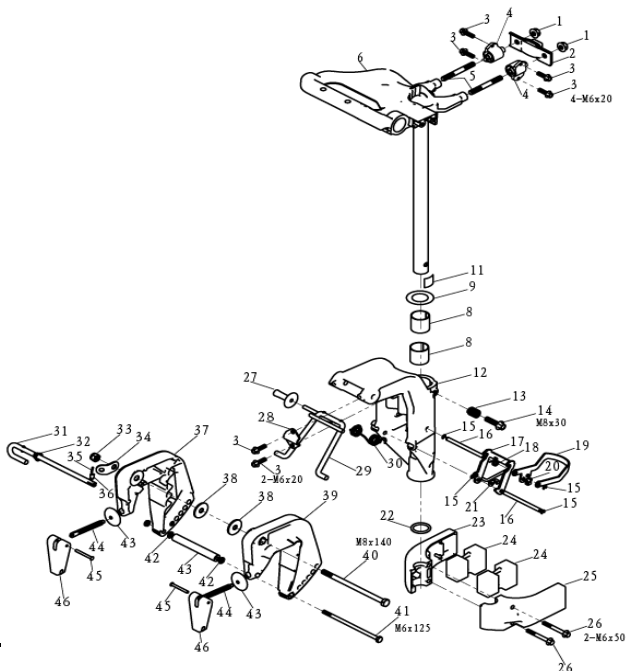


1	GB/T6187.1-2000 Гайка M8 F9.8A (13-1)	2
2	F9.8-06000300 Пластина F9.8A (13-2)	1
3	GB/T5789-2000 Болт M6X20 F9.8A (13-3)	4
4	F9.8-06000200 Вкладыш F9.8A (13-4)	2
5	F9.8-02030002 Шпилька M8*75 F9.8A (13-5)	2
6	F9.8-02030001 Вал рулевой F9.8A (13-6)	1
7	F9.8-02030008 Замок F9.8A (13-7)	1
8	F9.8-02030007 Втулка вала нейлоновая F9.8A (13-8)	2
9	F9.8-02030006 Шайба нейлоновая F9.8A (13-9)	1
10		1
11	F9.8-02060002 Замок F9.8A (13-11)	1
12	F9.8-02030004 Кронштейн поворотный F9.8A (13-12)	
13	F9.8-02000003 Пружина Ф13*20 F9.8A (13-13)	1
14	GB/T5782-86 Болт M8X30 F9.8A (13-14)	1
15	GB/T896-86 Кольцо стопорное 5 F9.8A (13-15)	4
16	F9.8-02060005 Вал наклона шпинделя (верхний) Ф6*82 F9.8A (13-16)	2
17	F9.8-02060001 Рамка самоблокирующая F9.8A (13-17)	1
18	F9.8-02060007 Пружина рамки F9.8A (13-18)	1
19	F9.8-02060003 Рокер самоблокирующий F9.8A (13-19)	1
20	F9.8-02060006 Штанга соединительная F9.8A (13-20)	1
21	F9.8-02060004 Замок F9.8A (13-21)	1
22	F9.8-02030005 Кольцо уплотнительное 24*3,5 F9.8A (13-22)	1
23	F9.8-06000005 Корпус амортизатора F9.8A (13-23)	1
24	F9.8-06000006 Амортизатор F9.8A (13-24)	2
25	F9.8-06000004 Корпус амортизатора F9.8A (13-25)	1
26	GB/T5782-86 Болт амортизатора M6X50 F9.8A (13-26)	2
27	F9.8-02050002 Втулка рамки F9.8A (13-27)	1
28	F9.8-02000005 Скоба рамки F9.8A (13-28)	1
29	F9.8-02050000 Рамка наклона F9.8A (13-29)	1
30	F9.8-02050003 Пружина F9.8A (13-30)	1
31	F9.8-02040001 Штырь деферента F9.8A (13-31)	1
32	F9.8-02040002 Пружина штыря деферента F9.8A (13-32)	1
33	GB/T943 Гайка M8 F9.8A (13-33)	1
34	ALT8-05000012 Скоба F9.8A (13-34)	1
35	GB879-86 Штифт штыря диферента F9.8A (13-35)	1
36	ALF4-00000203 Флажок штыря деферента F9.8A (13-36)	1
37	ALF4-00000010 Струбина правая F9.8A (13-37)	1
38	ALF4-00000002 Шайба струбины нейлоновая 30*8.5*2 F9.8A (13-38)	2
39	ALF4-00000201 Струбина левая F9.8A (13-39)	1
40	GB/T5782-2000 Болт струбины M8*140 F9.8A (13-40)	1
41	GB/T5782-2000 Болт струбины M6*125 F9.8A (13-41)	1
42	Шайба M6 F9.8A (13-42)	2
43	F9.8-02000006 Вал нижний Ф6.5*Ф11*98 F9.8A (13-43)	1
44	ALT8-05000202 Болт зажима струбины F9.8A (13-44)	2
45	ALT8-05000203 Фиксатор ручки зажима струбины 4*24 F9.8A (13-45)	2
46	ALT8-05000204 Ручка зажима струбины F9.8A (13-46)	2

Дейдвуд

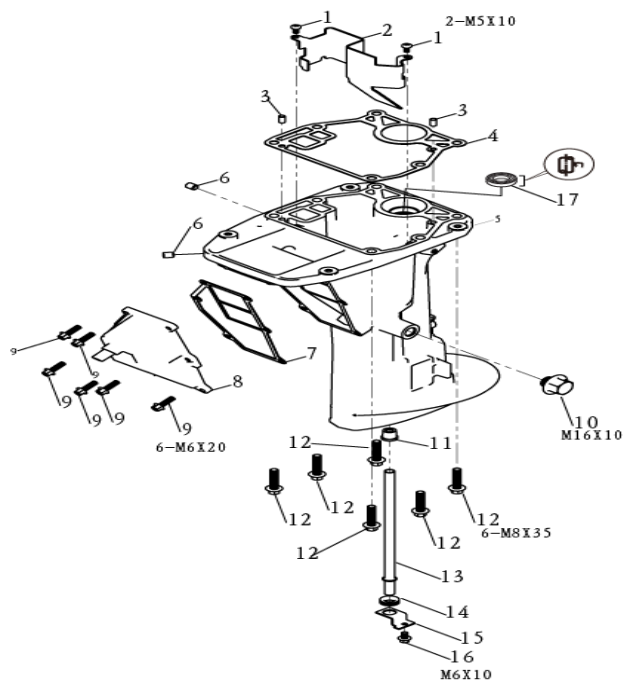

1	GB/T818-2000 Болт М4Х13 F9.8A (11-1)	2
2	F9.8-06000002 Пластина дейдвуда F9.8A (11-2)	1
3	GB/T119.2 Втулка направляющая Ф6Х12 F9.8A (11-3)	2
4	F9.8-01000009 Прокладка дейдвуда F9.8A (11-4)	1
5	F9.8-06000001 Корпус дейдвуда F9.8A (11-5)	1
6	ALT8-07000102 Втулки ф10х10 F9.8A (11-6)	2
7	F9.8-01050001 Прокладка крышки дейдвуда F9.8A (11-7)	1
8	F9.8-01050002 Крышка дейдвуда F9.8A (11-8)	1
9	GB/T5782-2000 Болт М6Х20 F9.8A (11-9)	6
10	ALF15-08000002 Пробка-болт F9.8A (11-10)	1
11	F9.8-06000009 Втулка трубки водопровода F9.8A (11-11)	1
12	GB/T5789-2000 Болт М8Х35 F9.8A (11-12)	6
13	F9.8-06000007 Трубка водопровода Ф10*20.5 F9.8A (11-13)	1
14	F9.8-06000010 Кольцо трубки водопровода F9.8A (11-14)	1
15	F9.8-06000008 Скоба трубки F9.8A (11-15)	1
16	GB/T818-2000 Болт М6Х10 F9.8A (11-16)	2
17	F9.8-06000011 Сальник дейдвуда F9.8A (11-17)	1

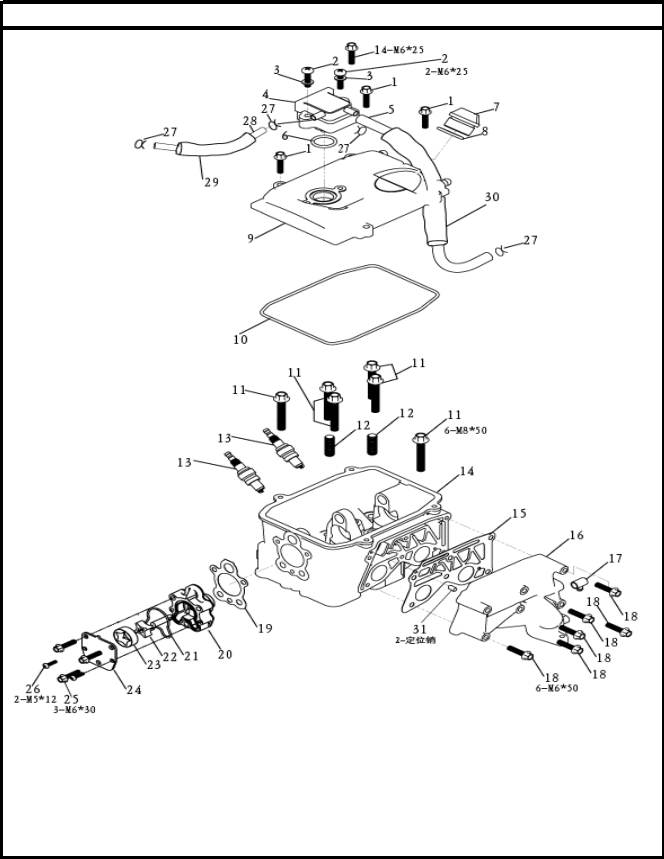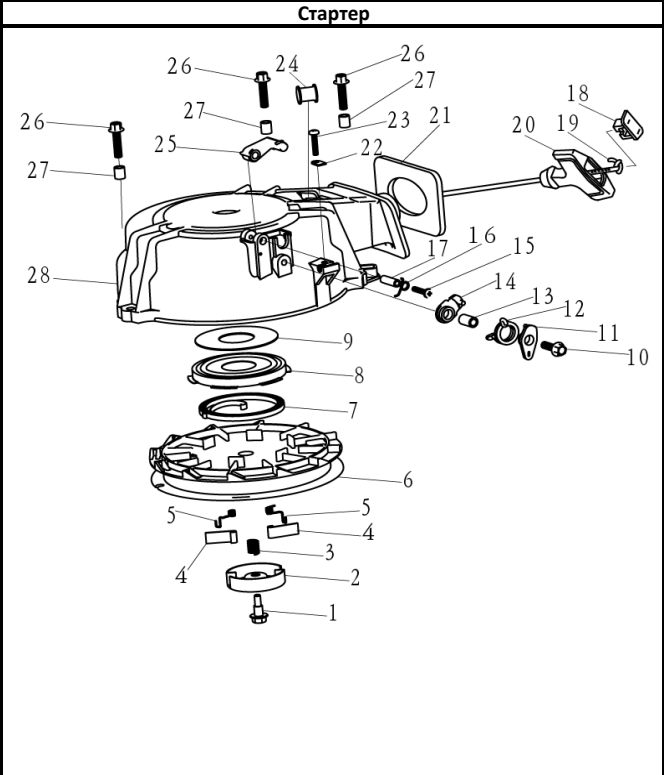	<table> <tr><td>1</td><td>GB/T5789-2000 Болт М6×20 F9.8A (9-1)</td><td>4</td></tr> <tr><td>2</td><td>GB/T823-88 Болт М6*25 F9.8A (9-2)</td><td>2</td></tr> <tr><td>3</td><td>GB/T848-2002 Шайба 6 F9.8A (9-3)</td><td>2</td></tr> <tr><td>4</td><td>F9.8-01060100 Топливный насос бензонасос F9.8A (9-4)</td><td>1</td></tr> <tr><td>5</td><td>F9.8-01060119 Трубка F9.8A (9-5)</td><td>1</td></tr> <tr><td>6</td><td>GB/T3452.1-2000 Уплотнительное кольцо топливного насоса F9.8A (9-6)</td><td>1</td></tr> <tr><td>7</td><td>F9.8-01020015 Пробка-щуп F9.8A (9-7)</td><td>1</td></tr> <tr><td>8</td><td>F9.8-01020016 Кольцо уплотнительное щупа F9.8A (9-8)</td><td>1</td></tr> <tr><td>9</td><td>F9.8-01020013 Крышка ГБЦ F9.8A (9-9)</td><td>1</td></tr> <tr><td>10</td><td>F9.8-01020014 Прокладка крышки ГБЦ F9.8A (9-10)</td><td>1</td></tr> <tr><td>11</td><td>GB/T5789-2000 Болт М8Х50 F9.8A (9-11)</td><td>6</td></tr> <tr><td>12</td><td>GB/T119.2 Втулка Ф6Х12 F9.8A (9-12)</td><td>2</td></tr> <tr><td>13</td><td>DCPR7E Свеча зажигания DCPR7E F9.8A (9-13)</td><td>2</td></tr> <tr><td>14</td><td>F9.8-01020101 Головка блока цилиндров F9.8A (9-14)</td><td>1</td></tr> <tr><td>15</td><td>F9.8-01040002 Прокладка выпуска F9.8A (9-15)</td><td>1</td></tr> <tr><td>16</td><td>F9.8-01040001 Корпус выпуска F9.8A (9-16)</td><td>1</td></tr> <tr><td>17</td><td>ALF15-08000100 Штуцер F9.8A (9-17)</td><td>1</td></tr> <tr><td>18</td><td>GB/T5789-2000 Болт М6Х50 F9.8A (9-18)</td><td>6</td></tr> <tr><td>19</td><td>F9.8-01020011 Прокладка масляного насоса F9.8A (9-19)</td><td>1</td></tr> <tr><td>20</td><td>F9.8-01020601 Корпус масляного насоса Ф29*10.0 F9.8A (9-20)</td><td>1</td></tr> <tr><td>21</td><td>F9.8-01020605 Уплотнитель масляного насоса Ф2 F9.8A (9-21)</td><td>1</td></tr> <tr><td>22</td><td>F9.8-01020603 Крыльчатка масляного насоса Ф20*9.95 F9.8A (9-22)</td><td>1</td></tr> <tr><td>23</td><td>F9.8-01020604 Стакан крыльчатки масляного насоса F9.8A (9-23)</td><td>1</td></tr> <tr><td>24</td><td>F9.8-01020607 Крышка масляного насоса F9.8A (9-24)</td><td>1</td></tr> <tr><td>25</td><td>GB/T5789-2000 Болт М6Х30 F9.8A (9-25)</td><td>3</td></tr> <tr><td>26</td><td>GB/T818-2000 Болт М5Х12 F9.8A (9-26)</td><td>2</td></tr> <tr><td>27</td><td>F9.8-01020602 Хомут Ф8*28.5 F9.8A (9-27)</td><td>1</td></tr> <tr><td>28</td><td>F9.8-01060118 Шлаг F9.8A (9-28)</td><td>1</td></tr> <tr><td>29</td><td>PVC Оплетка шланга F9.8A (9-29)</td><td>1</td></tr> <tr><td>30</td><td>F9.8-01060120 Трубка F9.8A (9-30)</td><td>2</td></tr> <tr><td>31</td><td>GB/T119.2 Втулка Ф6Х12 F9.8A (9-31)</td><td>2</td></tr> <tr><td>32</td><td>GB/T5789-2000 Болт М6Х25 F9.8A (9-32)</td><td>3</td></tr> </table>	1	GB/T5789-2000 Болт М6×20 F9.8A (9-1)	4	2	GB/T823-88 Болт М6*25 F9.8A (9-2)	2	3	GB/T848-2002 Шайба 6 F9.8A (9-3)	2	4	F9.8-01060100 Топливный насос бензонасос F9.8A (9-4)	1	5	F9.8-01060119 Трубка F9.8A (9-5)	1	6	GB/T3452.1-2000 Уплотнительное кольцо топливного насоса F9.8A (9-6)	1	7	F9.8-01020015 Пробка-щуп F9.8A (9-7)	1	8	F9.8-01020016 Кольцо уплотнительное щупа F9.8A (9-8)	1	9	F9.8-01020013 Крышка ГБЦ F9.8A (9-9)	1	10	F9.8-01020014 Прокладка крышки ГБЦ F9.8A (9-10)	1	11	GB/T5789-2000 Болт М8Х50 F9.8A (9-11)	6	12	GB/T119.2 Втулка Ф6Х12 F9.8A (9-12)	2	13	DCPR7E Свеча зажигания DCPR7E F9.8A (9-13)	2	14	F9.8-01020101 Головка блока цилиндров F9.8A (9-14)	1	15	F9.8-01040002 Прокладка выпуска F9.8A (9-15)	1	16	F9.8-01040001 Корпус выпуска F9.8A (9-16)	1	17	ALF15-08000100 Штуцер F9.8A (9-17)	1	18	GB/T5789-2000 Болт М6Х50 F9.8A (9-18)	6	19	F9.8-01020011 Прокладка масляного насоса F9.8A (9-19)	1	20	F9.8-01020601 Корпус масляного насоса Ф29*10.0 F9.8A (9-20)	1	21	F9.8-01020605 Уплотнитель масляного насоса Ф2 F9.8A (9-21)	1	22	F9.8-01020603 Крыльчатка масляного насоса Ф20*9.95 F9.8A (9-22)	1	23	F9.8-01020604 Стакан крыльчатки масляного насоса F9.8A (9-23)	1	24	F9.8-01020607 Крышка масляного насоса F9.8A (9-24)	1	25	GB/T5789-2000 Болт М6Х30 F9.8A (9-25)	3	26	GB/T818-2000 Болт М5Х12 F9.8A (9-26)	2	27	F9.8-01020602 Хомут Ф8*28.5 F9.8A (9-27)	1	28	F9.8-01060118 Шлаг F9.8A (9-28)	1	29	PVC Оплетка шланга F9.8A (9-29)	1	30	F9.8-01060120 Трубка F9.8A (9-30)	2	31	GB/T119.2 Втулка Ф6Х12 F9.8A (9-31)	2	32	GB/T5789-2000 Болт М6Х25 F9.8A (9-32)	3	
1	GB/T5789-2000 Болт М6×20 F9.8A (9-1)	4																																																																																																
2	GB/T823-88 Болт М6*25 F9.8A (9-2)	2																																																																																																
3	GB/T848-2002 Шайба 6 F9.8A (9-3)	2																																																																																																
4	F9.8-01060100 Топливный насос бензонасос F9.8A (9-4)	1																																																																																																
5	F9.8-01060119 Трубка F9.8A (9-5)	1																																																																																																
6	GB/T3452.1-2000 Уплотнительное кольцо топливного насоса F9.8A (9-6)	1																																																																																																
7	F9.8-01020015 Пробка-щуп F9.8A (9-7)	1																																																																																																
8	F9.8-01020016 Кольцо уплотнительное щупа F9.8A (9-8)	1																																																																																																
9	F9.8-01020013 Крышка ГБЦ F9.8A (9-9)	1																																																																																																
10	F9.8-01020014 Прокладка крышки ГБЦ F9.8A (9-10)	1																																																																																																
11	GB/T5789-2000 Болт М8Х50 F9.8A (9-11)	6																																																																																																
12	GB/T119.2 Втулка Ф6Х12 F9.8A (9-12)	2																																																																																																
13	DCPR7E Свеча зажигания DCPR7E F9.8A (9-13)	2																																																																																																
14	F9.8-01020101 Головка блока цилиндров F9.8A (9-14)	1																																																																																																
15	F9.8-01040002 Прокладка выпуска F9.8A (9-15)	1																																																																																																
16	F9.8-01040001 Корпус выпуска F9.8A (9-16)	1																																																																																																
17	ALF15-08000100 Штуцер F9.8A (9-17)	1																																																																																																
18	GB/T5789-2000 Болт М6Х50 F9.8A (9-18)	6																																																																																																
19	F9.8-01020011 Прокладка масляного насоса F9.8A (9-19)	1																																																																																																
20	F9.8-01020601 Корпус масляного насоса Ф29*10.0 F9.8A (9-20)	1																																																																																																
21	F9.8-01020605 Уплотнитель масляного насоса Ф2 F9.8A (9-21)	1																																																																																																
22	F9.8-01020603 Крыльчатка масляного насоса Ф20*9.95 F9.8A (9-22)	1																																																																																																
23	F9.8-01020604 Стакан крыльчатки масляного насоса F9.8A (9-23)	1																																																																																																
24	F9.8-01020607 Крышка масляного насоса F9.8A (9-24)	1																																																																																																
25	GB/T5789-2000 Болт М6Х30 F9.8A (9-25)	3																																																																																																
26	GB/T818-2000 Болт М5Х12 F9.8A (9-26)	2																																																																																																
27	F9.8-01020602 Хомут Ф8*28.5 F9.8A (9-27)	1																																																																																																
28	F9.8-01060118 Шлаг F9.8A (9-28)	1																																																																																																
29	PVC Оплетка шланга F9.8A (9-29)	1																																																																																																
30	F9.8-01060120 Трубка F9.8A (9-30)	2																																																																																																
31	GB/T119.2 Втулка Ф6Х12 F9.8A (9-31)	2																																																																																																
32	GB/T5789-2000 Болт М6Х25 F9.8A (9-32)	3																																																																																																
Стартер 	<table> <tr><td></td><td>F9.8-01070000 Стартер в сборе F9.8A (8-0)</td><td>1</td></tr> <tr><td>1</td><td>F9.8-01070003 Болт стартера F9.8A (8-1)</td><td>1</td></tr> <tr><td>2</td><td>F9.8-01070006 Тарелка F9.8A (8-2)</td><td>1</td></tr> <tr><td>3</td><td>F9.8-01070004 Фрикционная пружина F9.8A (8-3)</td><td></td></tr> <tr><td>4</td><td>F9.8-01070005 Стопор-упор F9.8A (8-4)</td><td>2</td></tr> <tr><td>5</td><td>F9.8-01070007 Пружина стопора-упора F9.8A (8-5)</td><td>2</td></tr> <tr><td>6</td><td>F9.8-01070201 Заводной барабан F9.8A (8-6)</td><td>1</td></tr> <tr><td>7</td><td>F9.8-01070205 Пружина стартера F9.8A (8-7)</td><td>1</td></tr> <tr><td>8</td><td>F9.8-01070204 Корпус пружины стартера F9.8A (8-8)</td><td>1</td></tr> <tr><td>9</td><td>F9.8-01070002 Шайба стартера F9.8A (8-9)</td><td>1</td></tr> <tr><td>10</td><td>GB/T5783-2000 Болт F9.8A (8-10)</td><td>1+3</td></tr> <tr><td>11</td><td>F9.8-01070106 Рычаг F9.8A (8-11)</td><td>1</td></tr> <tr><td>12</td><td>F9.8-01070102 Пружина F9.8A (8-12)</td><td>1</td></tr> <tr><td>13</td><td>F9.8-01070010 Втулка F9.8A (8-13)</td><td>1</td></tr> <tr><td>14</td><td>F9.8-01070107 Рычаг F9.8A (8-14)</td><td>1</td></tr> <tr><td>15</td><td>GB/T819-2000 Болт М4*30 F9.8A (8-15)</td><td>1</td></tr> <tr><td>16</td><td>F9.8-01070105 Пружина торсионная F9.8A (8-16)</td><td>1</td></tr> <tr><td>17</td><td>F9.8-01070103 Втулка F9.8A (8-17)</td><td>1</td></tr> <tr><td>18</td><td>ALF15-11010403 Заглушка ручки стартера F9.8A (8-18)</td><td>1</td></tr> <tr><td>19</td><td>F9.8-01070202 Шнур стартера ф4х1.8 F9.8A (8-19)</td><td>1</td></tr> <tr><td>20</td><td>ALF15-11050401 Ручка стартера F9.8A (8-20)</td><td>1</td></tr> <tr><td>21</td><td>F9.8-01070001 Отбойник ручки стартера F9.8A (8-21)</td><td>1</td></tr> <tr><td>22</td><td>F9.8-01070108 Пластина F9.8A (8-22)</td><td>1</td></tr> <tr><td>23</td><td>GB/T818-2000 Болт М4Х13 F9.8A (8-23)</td><td>1</td></tr> <tr><td>24</td><td>F9.8-01070109 Втулка F9.8A (8-24)</td><td>1</td></tr> <tr><td>25</td><td>F9.8-01070104 Стопор-упор блокировки F9.8A (8-25)</td><td>1</td></tr> <tr><td>26</td><td>GB/T5789-2000 Болт М6Х25 F9.8A (8-26)</td><td>3</td></tr> <tr><td>27</td><td>F9.8-01070110 Втулка F9.8A (8-27)</td><td>1</td></tr> <tr><td>28</td><td>F9.8-01070101 Корпус стартера F9.8A (8-28)</td><td>1</td></tr> </table>		F9.8-01070000 Стартер в сборе F9.8A (8-0)	1	1	F9.8-01070003 Болт стартера F9.8A (8-1)	1	2	F9.8-01070006 Тарелка F9.8A (8-2)	1	3	F9.8-01070004 Фрикционная пружина F9.8A (8-3)		4	F9.8-01070005 Стопор-упор F9.8A (8-4)	2	5	F9.8-01070007 Пружина стопора-упора F9.8A (8-5)	2	6	F9.8-01070201 Заводной барабан F9.8A (8-6)	1	7	F9.8-01070205 Пружина стартера F9.8A (8-7)	1	8	F9.8-01070204 Корпус пружины стартера F9.8A (8-8)	1	9	F9.8-01070002 Шайба стартера F9.8A (8-9)	1	10	GB/T5783-2000 Болт F9.8A (8-10)	1+3	11	F9.8-01070106 Рычаг F9.8A (8-11)	1	12	F9.8-01070102 Пружина F9.8A (8-12)	1	13	F9.8-01070010 Втулка F9.8A (8-13)	1	14	F9.8-01070107 Рычаг F9.8A (8-14)	1	15	GB/T819-2000 Болт М4*30 F9.8A (8-15)	1	16	F9.8-01070105 Пружина торсионная F9.8A (8-16)	1	17	F9.8-01070103 Втулка F9.8A (8-17)	1	18	ALF15-11010403 Заглушка ручки стартера F9.8A (8-18)	1	19	F9.8-01070202 Шнур стартера ф4х1.8 F9.8A (8-19)	1	20	ALF15-11050401 Ручка стартера F9.8A (8-20)	1	21	F9.8-01070001 Отбойник ручки стартера F9.8A (8-21)	1	22	F9.8-01070108 Пластина F9.8A (8-22)	1	23	GB/T818-2000 Болт М4Х13 F9.8A (8-23)	1	24	F9.8-01070109 Втулка F9.8A (8-24)	1	25	F9.8-01070104 Стопор-упор блокировки F9.8A (8-25)	1	26	GB/T5789-2000 Болт М6Х25 F9.8A (8-26)	3	27	F9.8-01070110 Втулка F9.8A (8-27)	1	28	F9.8-01070101 Корпус стартера F9.8A (8-28)	1										
	F9.8-01070000 Стартер в сборе F9.8A (8-0)	1																																																																																																
1	F9.8-01070003 Болт стартера F9.8A (8-1)	1																																																																																																
2	F9.8-01070006 Тарелка F9.8A (8-2)	1																																																																																																
3	F9.8-01070004 Фрикционная пружина F9.8A (8-3)																																																																																																	
4	F9.8-01070005 Стопор-упор F9.8A (8-4)	2																																																																																																
5	F9.8-01070007 Пружина стопора-упора F9.8A (8-5)	2																																																																																																
6	F9.8-01070201 Заводной барабан F9.8A (8-6)	1																																																																																																
7	F9.8-01070205 Пружина стартера F9.8A (8-7)	1																																																																																																
8	F9.8-01070204 Корпус пружины стартера F9.8A (8-8)	1																																																																																																
9	F9.8-01070002 Шайба стартера F9.8A (8-9)	1																																																																																																
10	GB/T5783-2000 Болт F9.8A (8-10)	1+3																																																																																																
11	F9.8-01070106 Рычаг F9.8A (8-11)	1																																																																																																
12	F9.8-01070102 Пружина F9.8A (8-12)	1																																																																																																
13	F9.8-01070010 Втулка F9.8A (8-13)	1																																																																																																
14	F9.8-01070107 Рычаг F9.8A (8-14)	1																																																																																																
15	GB/T819-2000 Болт М4*30 F9.8A (8-15)	1																																																																																																
16	F9.8-01070105 Пружина торсионная F9.8A (8-16)	1																																																																																																
17	F9.8-01070103 Втулка F9.8A (8-17)	1																																																																																																
18	ALF15-11010403 Заглушка ручки стартера F9.8A (8-18)	1																																																																																																
19	F9.8-01070202 Шнур стартера ф4х1.8 F9.8A (8-19)	1																																																																																																
20	ALF15-11050401 Ручка стартера F9.8A (8-20)	1																																																																																																
21	F9.8-01070001 Отбойник ручки стартера F9.8A (8-21)	1																																																																																																
22	F9.8-01070108 Пластина F9.8A (8-22)	1																																																																																																
23	GB/T818-2000 Болт М4Х13 F9.8A (8-23)	1																																																																																																
24	F9.8-01070109 Втулка F9.8A (8-24)	1																																																																																																
25	F9.8-01070104 Стопор-упор блокировки F9.8A (8-25)	1																																																																																																
26	GB/T5789-2000 Болт М6Х25 F9.8A (8-26)	3																																																																																																
27	F9.8-01070110 Втулка F9.8A (8-27)	1																																																																																																
28	F9.8-01070101 Корпус стартера F9.8A (8-28)	1																																																																																																